Grasper Repair Kit


Attaching braces and horizontals is made quick and easy with graspers. They attach solidly with a push, are assembled in seconds, and can be released with a quick flick after retracting the spring-loaded stainless steel locking-pin. However, moveable parts are known to become worn and damaged.




If you find the spring loaded, quick release mechanism becomes damaged or worn, this can easily be fixed with Access Scaffolding's Grasper Repair Kit.


Handy hints to ensure long life of your graspers

Make sure the horizontals braces are always clipped to the INSIDE of the standards. Misuse by dropping from height or throwing onto the back of vehicles for example can damage the ends of graspers. Fittings should be regularly inspected and any damaged fitting should be replaced.

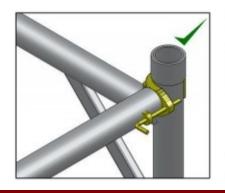

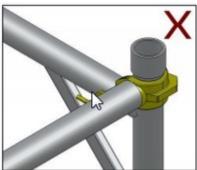

- 1. Check graspers are tight in the tube. Replace rivets if loose.
- 2. Check grasper pin action is free. Replace any bent items.
- 3. Brace grasper pins and springs should also be given a few drops of light oil, particularly if stored in the weather.
- 4. If grasper or platform hooks become closed or extended in any way for any reason it should be discarded.

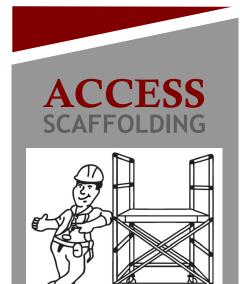

enquiries@ accessscaffolds.com.au accessscaffolding.com.au

...here to help

1300 133 922

SPRINGVALE
David Logan
(03) 9547 6682
1 Hillside Street
Springvale VIC 3171

GEELONG
Craig Cumming
(03) 03 5248 8087
48 Denbigh Street
Moolap VIC 3224

SOUTH AUSTRALIA Aaron Munroe (08) 8377 1103 5/55 Norfolk Street Marion SA 5043

MAS16-0096